



SMART PIPE WRAP

Repair Leaking Pipes with Ease

BONDS TO MOST PIPING MATERIAL

1. Turn off the water flow, roughen the surface with an appropriate tool around the damaged or leaking area.






2. Knead the EPOXY STEEL PUTTY to a soft, consistent grey colour and apply to the damaged area and allow to set.

3. Remove the SMART PIPE WRAP from its packaging. Wearing the supplied gloves, activate the resin by submerging and squeezing it in water for 10 seconds. You only have approximately 3 minutes working time once the SMART PIPE WRAP is opened and placed in water.

4. Wrap the SMART PIPE WRAP around the damaged area stretching it tightly and quickly.

5. Finish the repair by smoothing the SMART PIPE WRAP with a twisting motion as it hardens. Allow the SMART PIPE WRAP to set. (If you desire a smooth finish, add more water to smooth the resin as it is setting.)

REPAIRING STRAIGHT SECTION

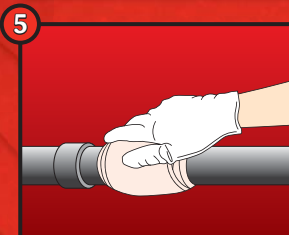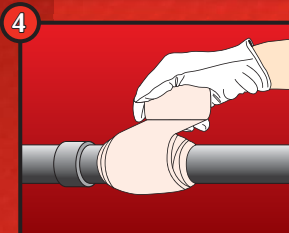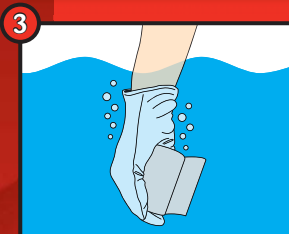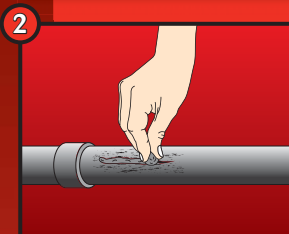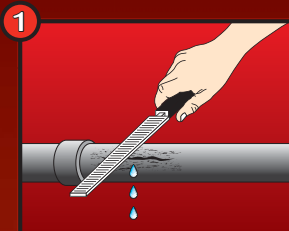

REPAIRING T OR ELBOW SECTION

